

用户手册

(1) 机器、电池、电源适配器、电脑数据线质保期为12个月。

(1) 退换货、送修途中由于运输、装卸所导致的损坏。

(5) 保修凭证与产品型号不符或保修凭证被涂改。

2.如下情形非保修范围,如需提供维修服务,可酌情收取物料及服务费用:

(4) 未按使用说明书要求安装、使用、维护、保管导致的产品故障或损坏。

(6) 产品铭牌、SN条码、防拆标签被撕掉或被损坏,模糊不清无法识别。

(8) 由于不可抗因素(如火灾、地震、水灾等)而造成的故障或损坏。

电源适配器,若有明显的硬物损伤、裂痕、断脚、严重变形,电线破损、断线、裸芯等现象。

(2) 在质保期内,非人为损坏,免费维修。

€ 电话:400-830-4882

深圳市亿道信息股份有限公司

- 👤 地址:深圳市坪山区光科一路8号亿道大厦
- 3) 质保范围是指产品在正常使用下出现问题。 备注:外观问题不属于保修范围。

- (3) 因产品不符合保修条件需收取费用的,授权服务中心将向消费者收取维修费。

### 注意: 仅限使用本产品随附的电源适配器。使用其他电源适配器可能会损坏您的设备 本章首先教导您如何将设备准备好,以便让您开始工作。接着概略地介绍设备的外观和组件。

1.电源适配器的 DC头 插入设备的DC口内。

2.将电源线的母端口端插入电源适配器,公端口端插入电源插座。

3.电源插座通过适配器为设备供电。现在您可以打开设备电源。

## 

- 打开包装后,您应该会看到下列标准项目: ·M10N加固平板电脑·电源适配器·绑带
- (3) 意外因素或人为行为导致产品损坏。如:进液、摔损、输入不合适电压、过度挤压、主板变形等。

- (1) 送修前,请您提前备份个人数据。维修过程中可能会造成您个人数据的丢失,我们会保护您的个人隐
- (2) 送修时,产品须经过授权服务中心专业的检测。确认故障后,服务中心会确定相应的维修方案。对于检

**ONE**Rugged

1.接上电源后加固平板电脑将自动开机。无需手动按下开机按键,操作系统 Microsoft Windows 将启动 。

## 注: 1.依照所购买的型号不同,设备外观可能和本手册所显示的结构有所不同。

设备外观介绍

### 







- 音量-键

说明	
2D扫描按键(可以定义)。	
用于打开Windows快捷方式。	]
用于调节增加音量。	
用于调节降低音量。	

# 待机休眠时蓝灯闪烁



符号	组件
0	Pogo pin
<b>2</b>	定位孔
	<u>गिं</u>

13.2	2011	
0	USB3.0端口	连接US
0	3.5mm音频端口	连接音
6	HDMI端口	连接HDMI显示
9	Type-C端口	连接 USB-

T.	€	HDMI端口	连接HDMI显示器或投影仪。	Г	7/t D
5	0	Type-C端口	连接 USB-C的设备。		符号
				•	



	符号	组件
Soft O GO HOM Type	0	Pogo pir
	0	定位孔

	13 3	-2.11	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
	0	USB3.0端口	连接USB设备
a	<b>2</b>	3.5mm音频端口	连接音频 设
·	6	HDMI端口	连接HDMI显示器或
	0	Tyne-C端口	连接 USB-C的设

			组件
连接 USB-C的设备。		0	DC充电口

# 将电池取下,在此位置取下卡座, 插入TF 卡+Micro Sim卡,NC卡槽暂时不提任何供功能。



	符号	组件	说明
Som C Som Type D	0	Pogo pin	与定位孔配合,连接车载支架、充电底座, 用于扩展USB、RJ45、RS232通讯接口。
	0	定位孔	连接车载支架、充电底座时起固定作用。

0	USB3.0端口	连接USB设备。
•	3.5mm音频端口	连接音频 设备
6	HDMI端口	连接HDMI显示器或投影仪。

3414	19.5	组件
连接 USB-C的设备。	0	DC充电口

电源适配器仅供您的设备使用。若挪作其它用途将可能损坏接上的电器或者适配 将TF卡和NanoSIM卡放入指定位置后重新插回即可使用,如下图 ·电源适配器所附的电源线为符合购买地的规格。若要在国外使用此设备,请咨询经销商取得合适的电源



设备问题可以是硬件、软件、或两者共同引起的。当您遭遇问题时,它可能只是一个一般性问题,能够轻易就

本章告诉您在面临一般性问题时,该尝试甚么方法来解决。

·确定 BIOS中的设置完全正确 ·确定所有驱动程序已安装完成。

·细观察实际的状况。屏幕上是否出现任何信息?指示灯的亮灯情形为何?当您必须寻求维修人员的帮忙时,

如果按照本章中的说明进行操作后问题仍然存在,请与授权经销商联系以寻求帮助。

·若欲拔开电源适配器时,必须先拔掉墙壁上的电源插头,再拔掉插在手持机上的电源接头,否则会使设备及

适配器受到外部电压冲击而受损。

·拔掉插头时,请垂直 90° 插拔,切勿拉扯电线,应用手握着插头拔出。

PNEKU99EU		1996
	PRODUCT NAME:	
•••	PRODUCT MODEL:	
	NAME OF CLIENT:	
	DATE OF PURCHAS	E:
	FACTORY CODE:	
		Mainte
	DATE IN SERVICE	EQUIPN MAINTEI DETA
_		
OUR ONE-STOP RUGGED COMPUTING SOLUTION	l	+

**ANE**nunned

(7) The product is out of warranty.

A 12-month warranty for the whole machine, batteries, power adapters, and data cables

responsible for the damage or loss of personal data during the maintenance process

plan. For detected non-faulty products, it will be returned as is.

When sending for repair, the product must be professionally inspected by an authorized sen

amage) within the warranty period, repair will be performed by free.

3) The warranty covers problems with the product under normal use. Note: cosmetic issues are not covered

This chapter first tells you step by step how to get the computer up and running. Then, you will find a section briefly introducing the external components of the computer.

there are obvious hard object damage, cracks, broken feet, severe deformation, damaged wires,

(6) The product nameplate, SN barcode, and tamper-proof label are torn off or damaged, making them

enter. After confirming the fault, the service center will determine the corresponding mainter

(3) If a fee is charged because the product does not meet the warranty conditions, the authorized service center will charge the consumer for maintenance.

· M10N Rugged Tablet PC · Power Adapter · Hand Strap

NERugged

1. Insert the DC head of the power adapter into the DC port of the device.

IING ON AND OFF THE DEVICE

1. Press the power button **(b)**. The operating system Windows will start

···

When you're work done, you can power it off or leaving it in Sleep or Hibernation mode:

3. The power outlet supplies power to the device through an adapter. Now you can power on the device.

 
Power button

shown in this manual.



+ Volume + Key






Volume - Key
 Used to decrease the device volume.

Used to open a Windows shortcut.

 
Used to increase the device volume.




36 Stereo speakers



③ <del>                                     </del>	STMDOL	COMI ONLIVI
	0	USB3.0 Port
	<b>@</b>	3.5mm Audio Port
	6	HDMI Port
	0	Type-C Port

 

	To lock the internal battery.		0	Modular Interface
--	-------------------------------	--	---	-------------------

 

0	USB3.0 Port	Connects USB devices.	SYMBOL	COMPONENTS	
0	3.5mm Audio Port	Connects audio devices.	•	Pogo pin	Works with the vehicle mount for USB, RJ45.
€	HDMI Port	Connects an HDMI display or projector.			Works with po
0	Type-C Port	Connects USB-C devices.		Positioning holes	vehicle mount o for USB, RJ45,

Put the TF card and Nano SIM card back to their right positions as shown in the figure below, then to use.

electrical appliances or adapters.

unplug the power connector plugged into the handset, otherwise the device and adapter will be damaged

use this device abroad, consult your dealer for a suitable power cord.

by external voltage impact.

battery is also automatically charged when the power adapter is connected. The adapter input operates

from 100V to 240V AC and the output is 19V. Make sure the settings in the BIOS are completely correct.

· Make notes of your observations. Does any message appear on the screen? What is the status of the

If any problem persists after you follow the instructions in this chapter, contact an authorized dealer for

Equipment problems can be caused by hardware, software, or both, When you have a problem. When you

This chapter tells you what actions to take when solving common computer problems.